

Spark Your Project


How to MIG Weld a Dutch Oven Trivet

Tools & Materials Needed:

- Hobart® Handler® 125 MIG Welder
- 3 – Horseshoes
- 3 – 1/2" x 2-1/2" Round stock




Steps:

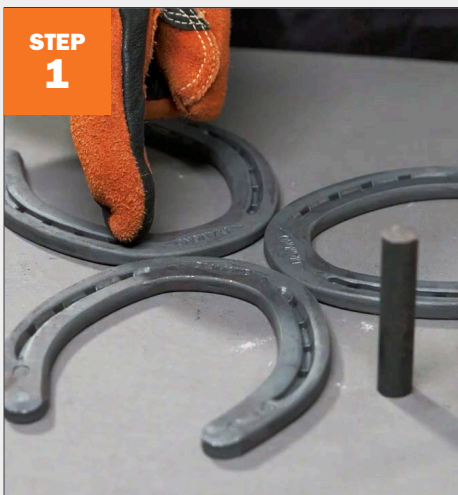

STEP 1
Place horseshoes so that the three tops of the horseshoes are in contact.



STEP 2
Tack and weld horseshoes together where they meet.

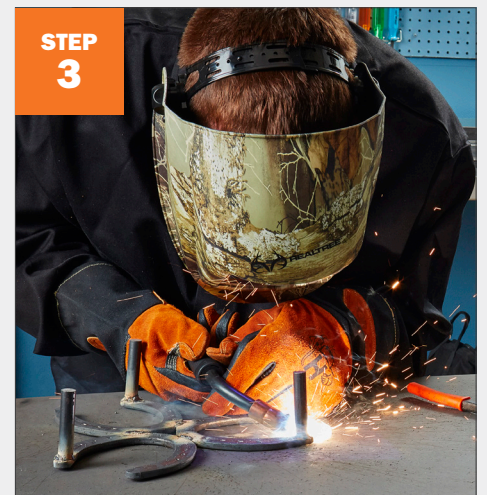

STEP 3
Tack and weld the three stands on every-other end of the horseshoes.

Full Video: <https://youtu.be/5Cif8pZeA4c>

For more project ideas visit **HOBARTWELDERS.COM**

